

# air cushion door stop

**Lock Now  
Included!**

## Parts Included:



## What You Need:



**Helpful Hint -**  
Use Holdfast® **STICKi** Spots to help line up parts. Insert lock in outer doorstop. Attach **STICKi** Spot to back of lock and press against door. Detach lock from outer doorstop.

## ...How To:



**STEP 1**  
Place lock on flat surface. Push outer doorstop down on lock to punch hole on outer doorstop.



**STEP 2**  
Place inner doorstop against wall. Screw inner doorstop to wall.



**STEP 3**  
Slide outer doorstop over inner.



**STEP 4**  
Line up lock with outer doorstop (\*see helpful hint), screw lock to door.

\* Due to customer feedback, the outer radius on the inner doorstop has now been made slightly larger so it can be removed if necessary.

HOLDFAST NZ LTD  
GORILLA ADHESIVES PTY LTD (AUST)  
14 Avalon Drive, SH 1, Nawton 3200  
PO Box 4206, Hamilton East 3247  
Hamilton, New Zealand  
Ph: (07) 8475540, Fax (07) 847 5540,  
email: sales@holdfast.co.nz  
http://www.holdfast.co.nz  
http://www.gorillaglue.co.nz  
http://www.stickon.co.nz