

air cushion door stop

**Lock Now
Included!**

Parts Included:



Outer doorstop



Inner doorstop



Screw



Lock

What You Need:

#11965

**Screw Driver or drill**
(with screwdriver attachment)

#50068

**Holdfast® StICKi Spots****Helpful Hint -**Use Holdfast® **STICKi** Spots to help line up parts. Insert lock in outer doorstop. Attach **STICKi** Spot to back of lock and press against door. Detach lock from outer doorstop.

...How To:

**STEP 1**

Place lock on flat surface. Push outer doorstop down on lock to punch hole on outer doorstop.

**STEP 2**

Place inner doorstop against wall. Screw inner doorstop to wall.

**STEP 3**

Slide outer doorstop over inner.

**STEP 4**

Line up lock with outer doorstop (*see helpful hint), screw lock to door.

* Due to customer feedback, the outer radius on the inner doorstop has now been made slightly larger so it can be removed if necessary.

HOLDFAST NZ LTD
GORILLA ADHESIVES PTY LTD (AUST)
14 Avalon Drive, SH 1, Nawton 3200
PO Box 4206, Hamilton East 3247
Hamilton, New Zealand
Ph: (07) 8475540, Fax (07) 847 5540,
email: sales@holdfast.co.nz
<http://www.holdfast.co.nz>
<http://www.gorillaglue.co.nz>
<http://www.stickon.co.nz>