



how to

Fix Drywall to Timber With No Risk!

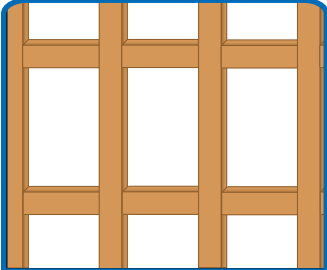


STEP 1

Ensure framing is clean & free from oil or dirt. Moisture content 18% ≤ at time of lining.

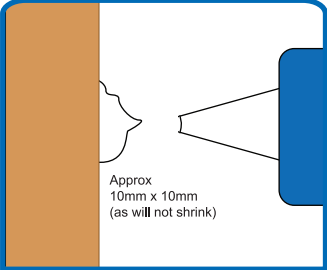


STEP 2

Using a 10mm x 10mm sized bead, apply SB Xtra® using a Fix All® Ultimate Gun

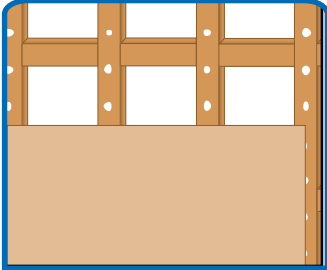

STEP 3

Press the drywall against the adhesive to join the drywall to framing. *See exact spacing below.

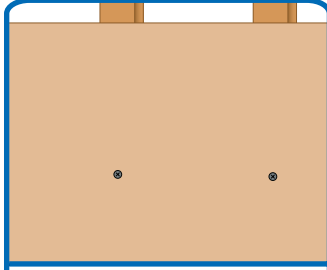

STEP 4

Use single screws or nails at a clamp. Allow 24 hours to cure. *See exact details below.

... why SB Xtra®?

SB Xtra® eliminates all risks, with its extremely high initial tack and it will not slide. Guaranteed to stick drywall to timber!



- ✓ **Guaranteed to not slide = Instant walls!**
- ✓ **Guaranteed to have high initial tack!**
- ✓ **Guaranteed to not shrink = No popping!**
- ✓ **NO RISKS, TRUST SB Xtra, Guaranteed to work!**

... what you need

310ml cartridge (#20013) or 600ml sausage (#19317)


SB Xtra® Construction Adhesive

Clear (#20096) or Aluminium (#21116)

Fix All® Ultimate Gun

...how to comply diagram

- SB Xtra daubs at 300mm centres
- Single screws or nails to each stud where the horizontal joint crosses the studs.
- Screws or nails at 300mm centres to top and bottom plates and to perimeter studs.
- 5-10mm gap between bottom edge of lower sheet and floor.
- Studs at 600mm maximum.

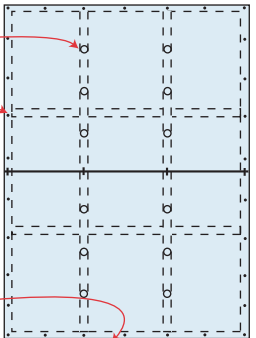

GUARANTEED NO RISK!

Brett Henderson
Brett Henderson
Managing Director, Holdfast NZ Ltd

*NOTE: This information is intended as a guide only. If you are unsure please contact us for more detail. No responsibility will be accepted for incorrect installation. Test is best. Please refer to technical datasheet on our website. www.holdfast.co.nz