



# how to

## Install Rimu Windows without Holes

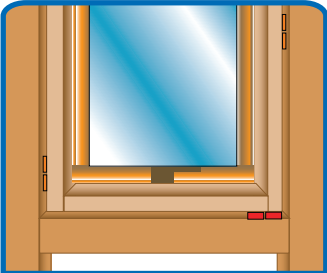


### STEP 1

Position window using Fox® Wedges or Fox® H Packers Click n Fix.

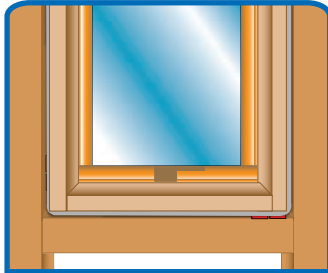


### STEP 2

Put Gator® PEF Rod in cavity as per NZ Building Code.

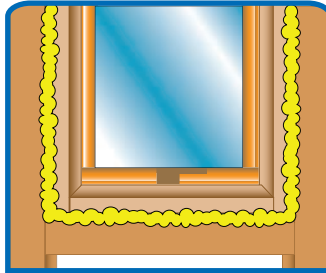

### STEP 3

Place nozzle approx 20mm in cavity. Apply Gorilla® Nailpower® (ensure foam touches the rod & sides)

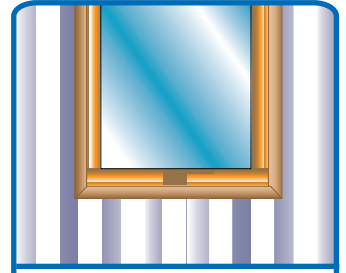

### STEP 4

Gorilla® Nailpower® will expand & fill the gap in front of the Gator® PEF Rod.

\*NOTE: Use Gorilla Nailpower Cleaner to clean gun after each empty can.

## ... why use Gorilla® Nailpower®?

Gorilla® Nailpower® foam takes moisture from the air as it cures then expands and fills the gap between the jam & stud.



- ✓ No nails holes = Perfect finish!
- ✓ No holes to fill = Save labour = Reduce your costs!
- ✓ Quick, strong, flexible & NZBC compliant!
- ✓ TRUST Gorilla Nailpower, Guaranteed to work!

## ... what you need



\*NOTE: This information is intended as a guide only. If you are unsure please contact us for more detail. No responsibility will be accepted for incorrect installation. Test is best. Please refer to technical datasheet on our website, [www.holdfast.co.nz](http://www.holdfast.co.nz)