



how to

Stop Showers Squeaking!

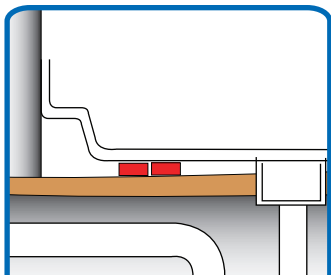


STEP 1

Position & level shower tray using Fox® H Packers.

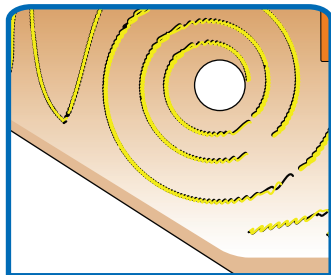


STEP 2

Slightly dampen floor & apply Gorilla® Nailpower® in a spiral bead. (approx. 15mm bead, 75mm apart)

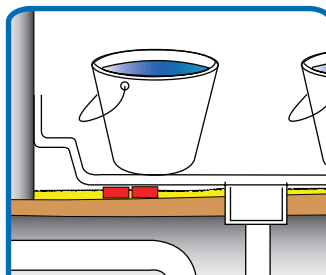

STEP 3

Weight shower tray to clamp as adhesive cures. Eg. use approx 60L water in buckets.

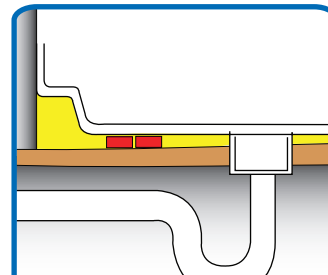

STEP 4

Gorilla® Nailpower® will expand & fill between shower tray & floor to fill gaps & voids.

*NOTE: Use Gorilla Nailpower Cleaner to clean gun after each empty can.

... why use Gorilla® Nailpower®?

Gorilla® Nailpower® foam takes moisture from the air as it cures then expands and fills the gaps/voids



- ✓ Fill gaps = STOPS squeaks!
- ✓ No repair costs!
- ✓ 100% waterproof!
- ✓ TRUST Gorilla Nailpower, Guaranteed to work!

... what you need

750ml (#20088)

Gorilla® Nailpower®
Click n Fix



(#20106)

Gorilla® Nailpower®
Click n Fix Pro Gun



(#39155-yellow 1.5mm,
#39156-orange 2mm,
#39157-red 3mm,
#39158-blue 5mm,
#39162-black 6mm,
#39159-green 10mm)

Fox® H Packers
Click n Fix

*NOTE: This information is intended as a guide only. If you are unsure please contact us for more detail. No responsibility will be accepted for incorrect installation. Test is best. Please refer to technical datasheet on our website, www.holdfast.co.nz